

Axxis HS Driver

Technical Support Bulletin

Install Printer Driver

Last update 5-9-13

Abstract: Installation Procedure for Axxis HS Printer

Goto <http://adsiusa.com/>

Tech support -> Online Documents -> Axxis -> Firmware Updates and Technical Support Bulletins -> Right click on Axxis HS Printer Driver -> save Target as -> select desktop as destination directory.

Right click on downloaded file and Extract All to desktop.

Windows 8.1

Use this set of instructions for enabling the installation of unsigned drivers.

<http://www.howtogeek.com/167723/how-to-disable-driver-signature-verification-on-64-bit-windows-8.1-so-that-you-can-install-unsigned-drivers/>

Continue with windows 8 instructions

Windows 8

Use this set of instructions for enabling the installation of unsigned drivers.

<http://www.tabletoms.com/forums/visual-land-tablets/5894-how-install-unsigned-drivers-windows-8-a.html>

Click start button on keyboard -> type in printers -> select settings -> click on devices and printers

Click on add printer

The printer I want isn't listed




56 Kendall Pond Road
Derry, NH 03038
603-216-6344



All products made in America

Select add a tcpip printer

Type in ip address of printer. You can get this from the printer. Be sure to connect lan cable to your network before you turn on the printer.

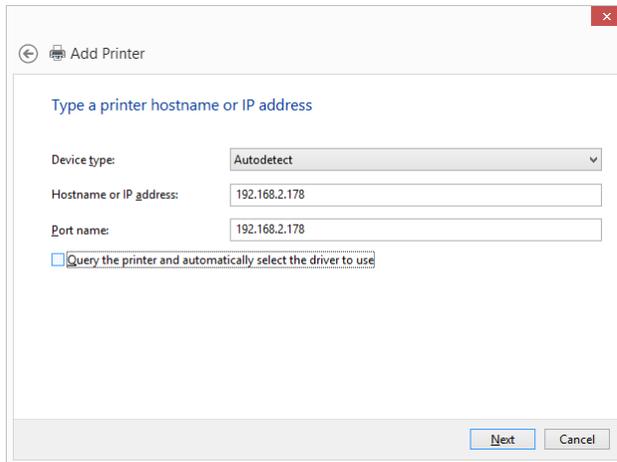

← Add Printer

Type a printer hostname or IP address

Device type: Autodetect

Hostname or IP address: 192.168.2.178


Port name: 192.168.2.178

Query the printer and automatically select the driver to use

Next Cancel

Uncheck query printer, click on next

click on custom -> settings

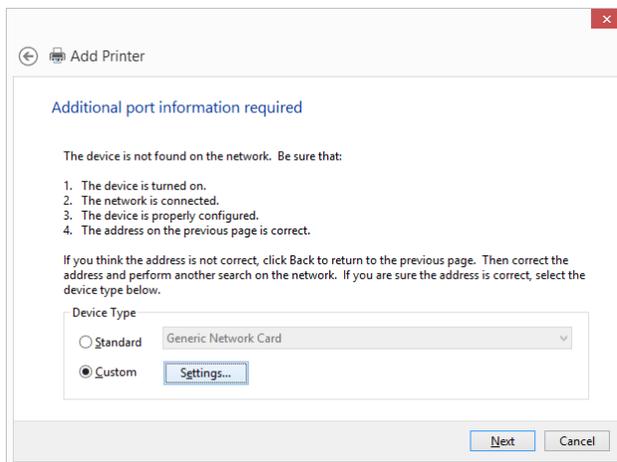

← Add Printer

Additional port information required

The device is not found on the network. Be sure that:

1. The device is turned on.
2. The network is connected.
3. The device is properly configured.
4. The address on the previous page is correct.


If you think the address is not correct, click Back to return to the previous page. Then correct the address and perform another search on the network. If you are sure the address is correct, select the device type below.

Device Type

Standard Generic Network Card

Custom Settings...

Next Cancel

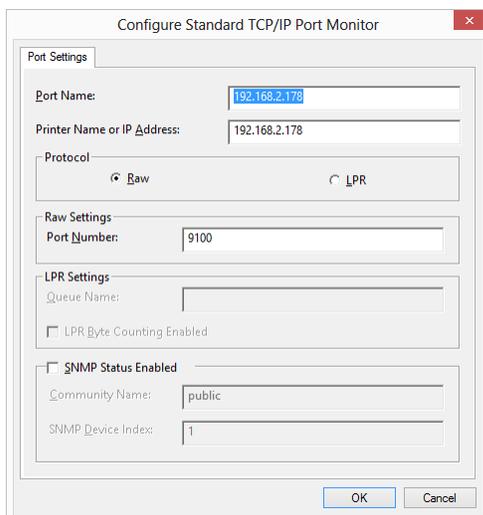

Configure Standard TCP/IP Port Monitor

Port Settings

Port Name: 192.168.2.178

Printer Name or IP Address: 192.168.2.178

Protocol: Raw LPR

Raw Settings

Port Number: 9100

LPR Settings

Queue Name:

LPR Byte Counting Enabled


SNMP Status Enabled

Community Name: public

SNMP Device Index: 1


OK Cancel

Click on OK

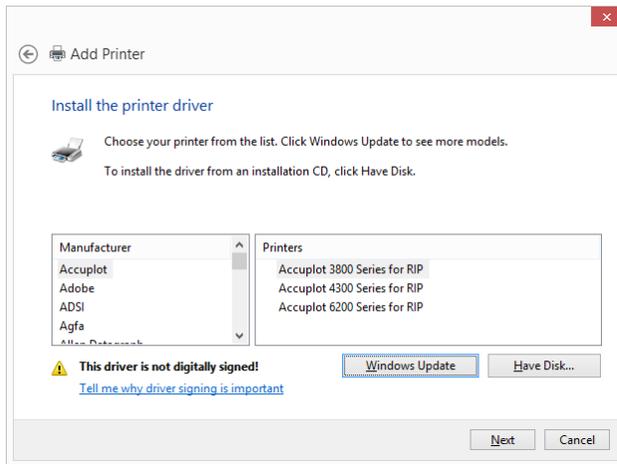



click on have disk

select directory where you unzipped driver

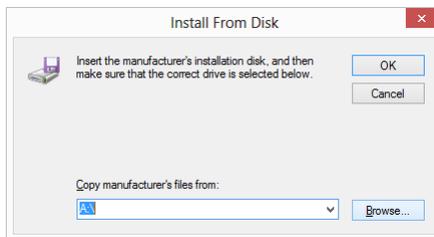


click on browse

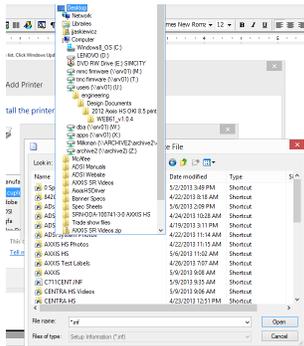

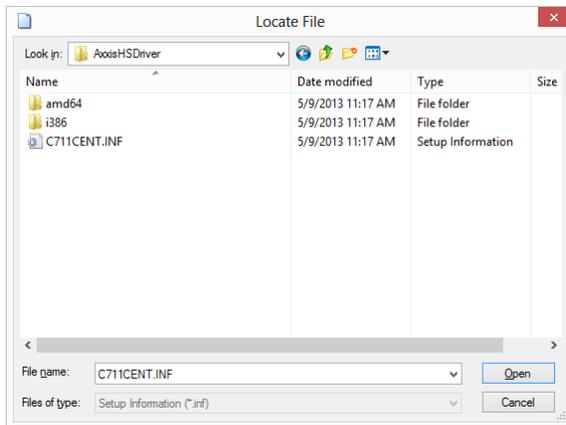


click on open, then ok


select axis hs

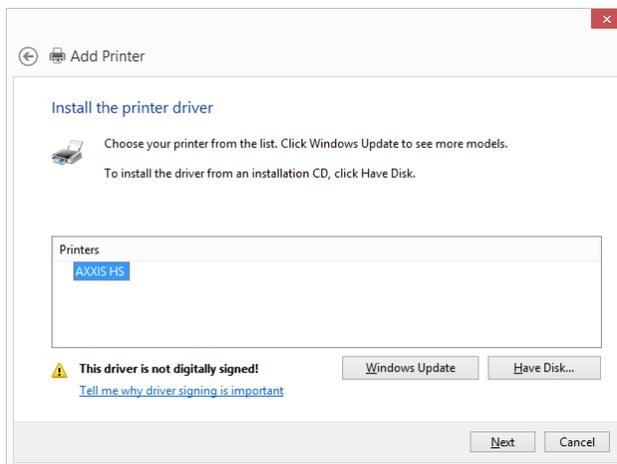


click on next

Click on Install this driver software anyway.

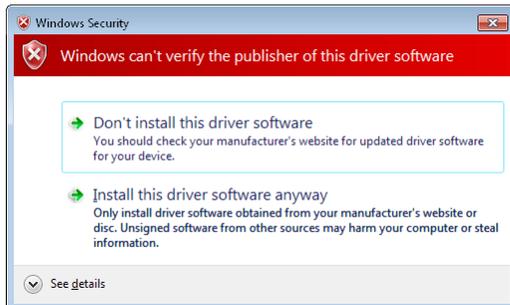


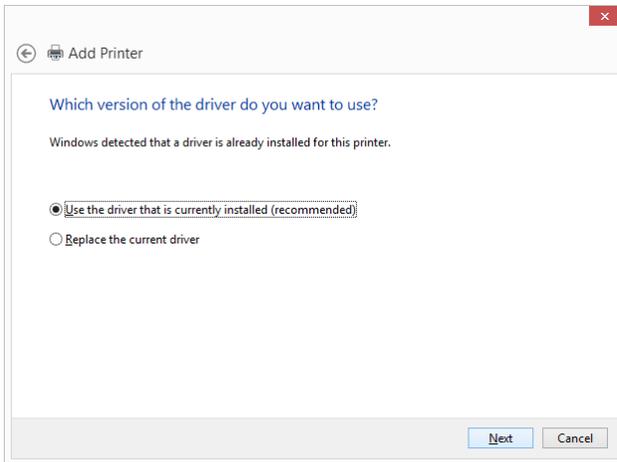


choose driver name

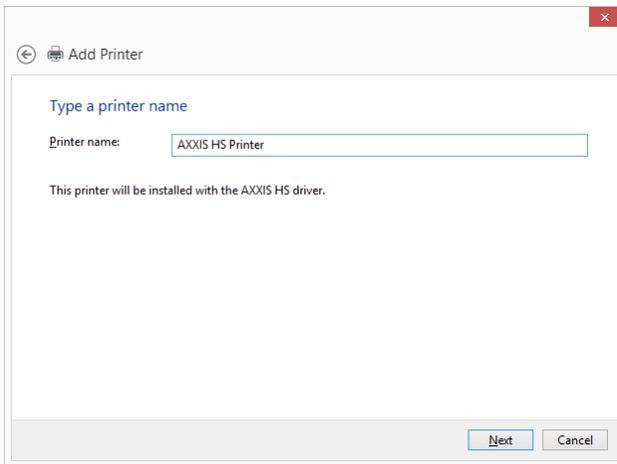

and other sharing

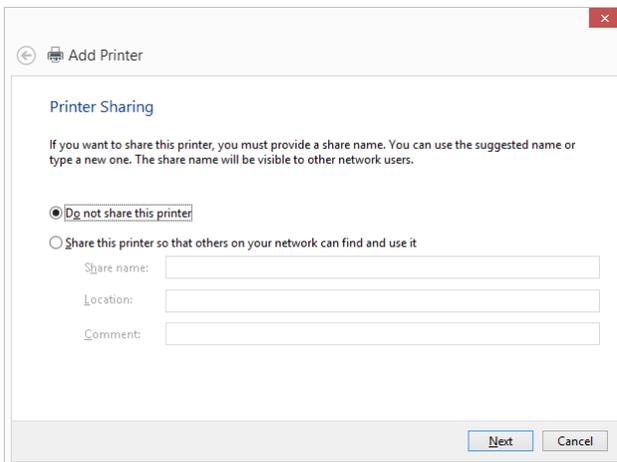


as desired

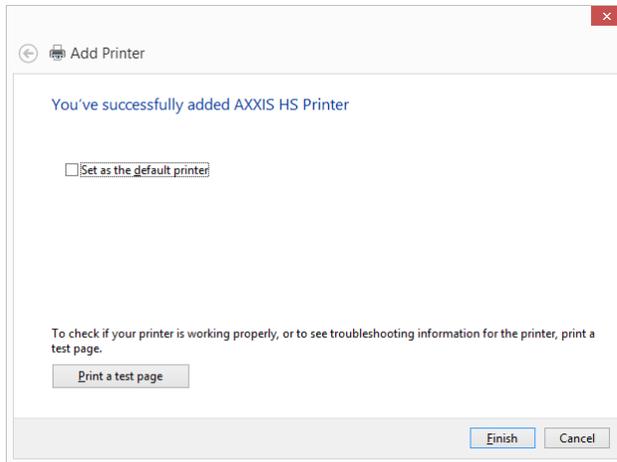

and click on finish.

Windows 7

Click on start -> devices and printers

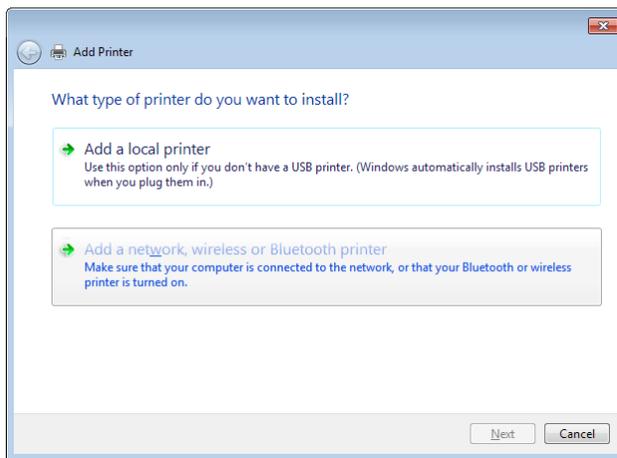

Click Add a network, wireless or Bluetooth printer.

Then join the Windows 8 installation instructions at Click on the printer that I want isn't listed


Windows xp

start -> control panel -> printers and faxes


click on add a printer




click on next

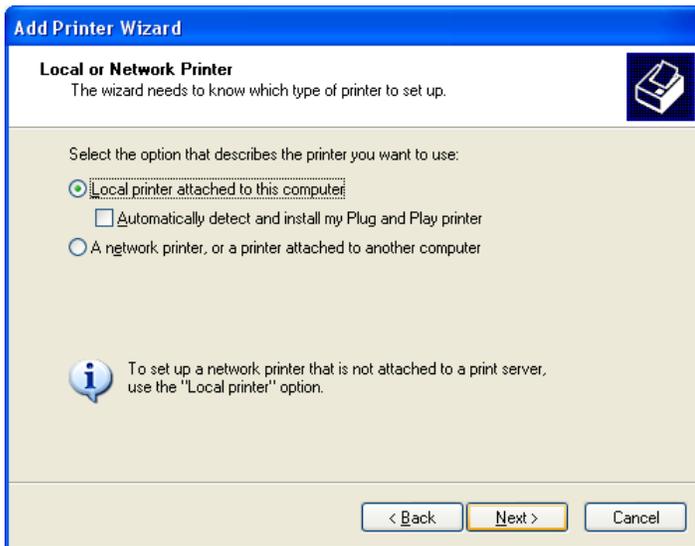


select local printer, click on next

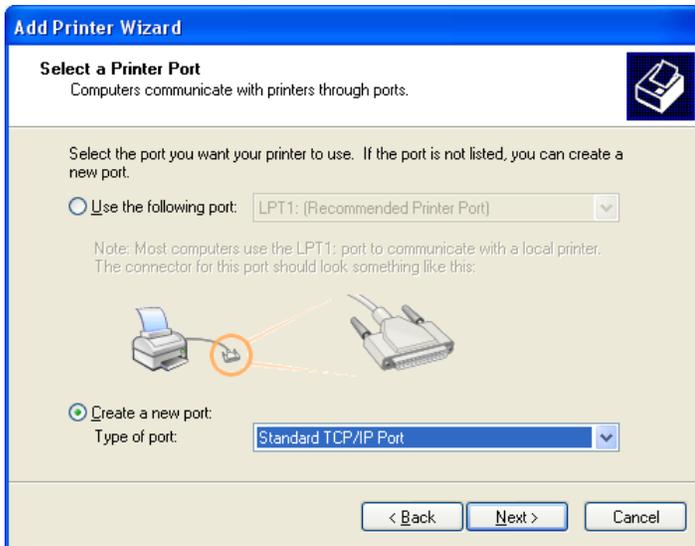


select create a new port, select standard tcp/ip port

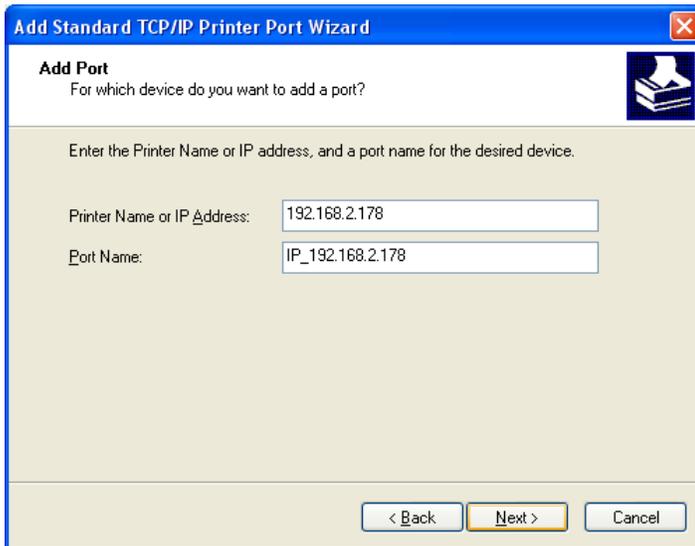


Type in ip address of printer. You can get this from the printer. Be sure to connect lan cable to your network before you turn on the printer, click next

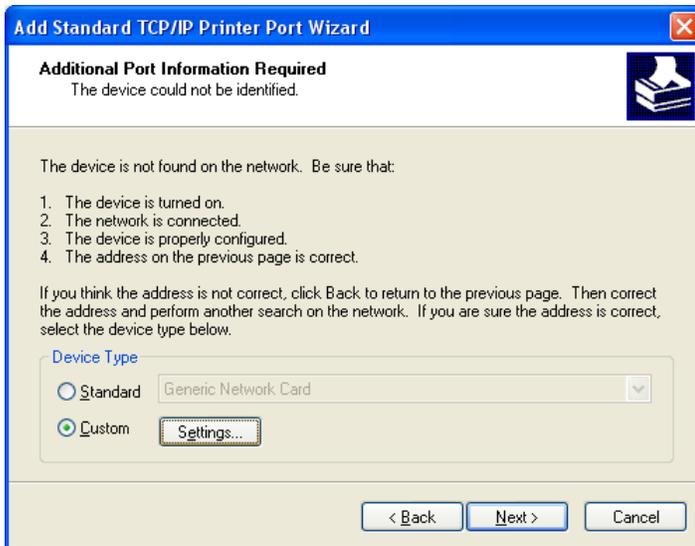

select custom -> settings

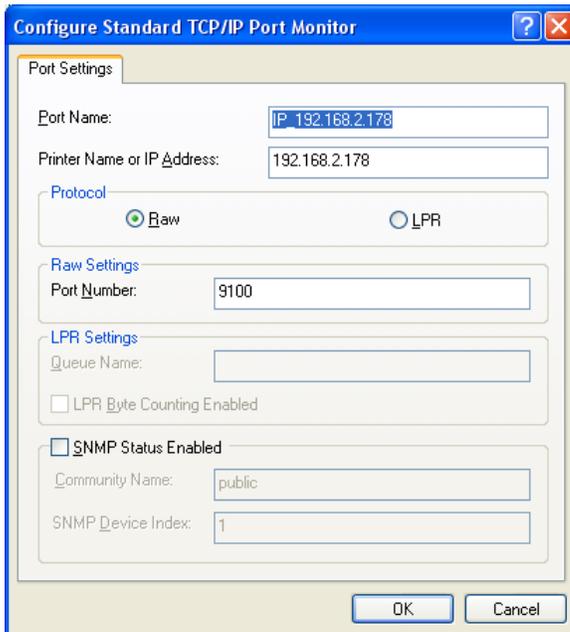

click ok

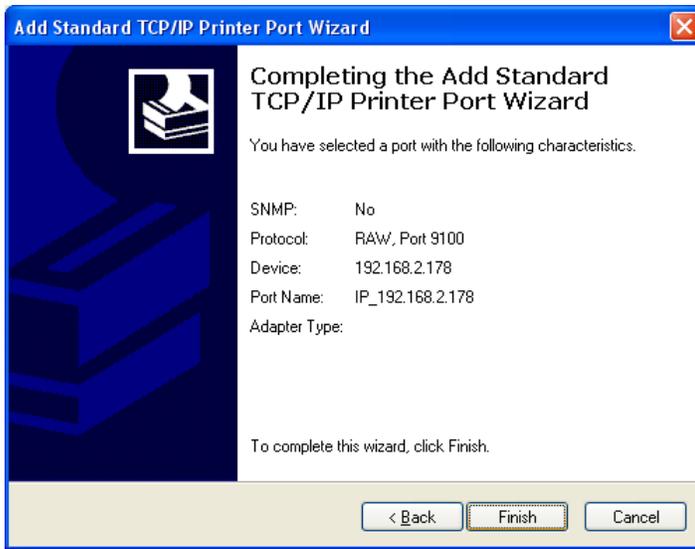

click finish